# Wall Mounted Rotary Panel

## Model No.: T11-K, T12-K, T13-K

1-3 color/Glass panel/Rotary dimming/AC input/DMX 512 and RF 2.4G signal output



### Features

- Rotary panel single color, dual color or RGB DMX512 master, can also be used as one zone RF remote.
- DMX signal output, comply to standard DMX.512 protocol, compatible with DMX decoder from any supplier.
- When work as DMX512 master, compatibility with RF 2.4G single zone or multiple zone remote control.
- When used as RF remote, can remote control multiple RF 2.4G LED controllers.
- Rotate knob to change RGB color, color temperature or brightness.
- 256 levels 0-100% dimming smoothly without any flash.
- Push/Rotate with chord tones and LED indicator.
- White & Black glass panel available.

### **Technical Parameters**

Model No.	Т11-К	Т12-К	T13-K
Light type	Single color	Dual color	RGB
Output DMX channel number	1	2	3

Rotary knob + RF 2.4GHz 10m(Barrier-free space)

256 levels 0-100%

Ta: -30°C ~ +55°C

Tc: +65°C

IP20

Input and Output		Dimming data
Input voltage	100-240VAC	Input signal
Input current	Max 0.1A	RF Control distance
Output signal	DMX512, RF 2.4GHz	Dimming level
Safety and EMC		Dimming range
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4	Environment
Safety standard(LVD)	EN 62368-1:2020+A11:2020	Operation temperature
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	Case temperature (Max.)
Certification	CE,EMC,IVD,RED	IP rating

W	ar	r	a	n	t	
W	ar	r	a	n	t	


Warranty 5 years

T11-K Single color d	immer
	Push: Turn on or off light. After turn on light:
A MARKET	<ul> <li>Rotate: Rotate knob to adjust brightness (2.5 turns, 50 levels).</li> <li>Long push(1-6s): Continuous 256 levels brightness adjustment.</li> </ul>
T12-K Dual color ten	nperature
	• Push: Turn on or off light.
	After turn on light:
	After turn on light: • Rotate: Rotate knob to change color temperature or brightness (2.5 turns, 50 lev • Push twice: Switch between color temperature or brightness adjustment.
	After turn on light: • Rotate: Rotate knob to change color temperature or brightness (2.5 turns, 50 lev
T13-K RGB	After turn on light: • Rotate: Rotate knob to change color temperature or brightness (2.5 turns, 50 lev • Push twice: Switch between color temperature or brightness adjustment.
T13-K RGB	After turn on light: • Rotate: Rotate knob to change color temperature or brightness (2.5 turns, 50 lev. • Push twice: Switch between color temperature or brightness adjustment. • Long push(1-6s): Continuous 256 levels brightness adjustment. • Push: Turn on or off light.
T13-K RGB	After turn on light: • Rotate: Rotate knob to change color temperature or brightness (2.5 turns, 50 lev. • Push twice: Switch between color temperature or brightness adjustment. • Long push(1-6s): Continuous 256 levels brightness adjustment.

- Push twice: Switch between RGB color or brightness adjustment.
- Long push(1-6s): Continuous 256 levels brightness adjustment.

Note: After push knob to turn off light, long press push knob for 5 seconds will turn on or turn off tone.

## Wiring Diagram for rotary panel work as DMX512 master

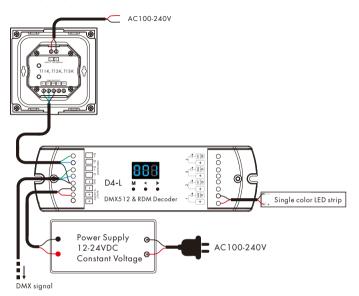

When the rotary panel controller work as DMX512 master, it can also match with the RF remote (optional). End user can choose the suitable match/delete ways. Two options are offered for selection:

### Use Knob

#### Match:

Turn on light, turn off, immediately push the knob for 5s, then press on/off key (single zone remote) or zone key (multiple zone remote) of the RF remote within 5s. The LED indicator fast 1 times means match is successful.

#### Delete:

User Manual Ver 1.1.1

Turn on light, turn off, immediately push the knob for 10s to delete all match, The LED indicator fast flash 6 times means all matched remotes were deleted.

### Use Power Restart

#### Match:

Switch off the power, then switch on power, repeat again. immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The LED indicator fast flash 3 times means match is surcessful

#### Delete:

Switch off the power, then switch on power, repeat again. immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The LED indicator fast flash 6 times means all matched remotes were deleted.

## Wiring Diagram for rotary panel work as RF remote

3

When the rotary panel controller work as RF remote, it need match with other RF 2.4G LED controllers. End user can choose the suitable match/delete ways. Two options are offered for selection:

### Use the controller's Match key

#### Match:

Short press match key, immediately short press the knob of the rotary panel. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete match, The IED indicator fast flash a few times means match was deleted.

#### Use Power Restart

#### Match:

Switch off the power of the receiver, then switch on power, repeat again. immediately short press the knob 3 times on the rotary panel. The light blinks 3 times means match is successful.

#### Delete:

Switch off the power of the receiver, then switch on power, repeat again. immediately short press the knob 5 times on the rotary panel. The light blinks 5 times means match was deleted.

Typical base as below:

## Mechanical Structures and Installations

AC100-240V

 
90

5 N


T11-K, T12-K, T13-8


DEX OUTPUT

00000



Installation diagram:

 

 

Uninstall Touch panel

Baseplate



Base



European style

86 size

Page 2